

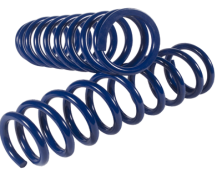




# SUZUKI JIMNY - 4WD

SN413 to JB33 Wagon All Models 10/1998 to 2009

Part and Location	Description	Approx Lift Heights	Part No.	Qty Per Vehicle	
<b>Shock Absorbers</b>					
Front ⊥ ○		36mm Gas Bulged Shock Absorbers	<b>SA36631G</b>	2 ea	
Rear ○ ○		36mm Gas Bulged Shock Absorbers	<b>SA36640G</b>	2 ea	
<b>Coil Springs</b>					
Front		Raised Height Coils	30mm	<b>SUZ-206</b>	1 pr
	<i>Coil Spacers Available</i>	15mm Front Coil Spacer	15mm	<b>CSS1743-15</b>	1 only
Rear		Raised Height Coils	30mm	<b>SUZ-212</b>	1 pr
	<i>Coil Spacers Available</i>	15mm Rear Coil Spacer	15mm	<b>CSS1743-15</b>	1 only
		30mm Rear Coil Spacer	30mm	<b>CSS1743-30</b>	1 only
<p><b>* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)</b></p> <p><b>* You can achieve a 30mm lift by using the raised height coils OR you can achieve a 15mm/30mm lift by using a coil spacer. It is NOT recommended that you use coil spacers in addition to the coils</b></p>					